


Cold Air Intake Instructions / List

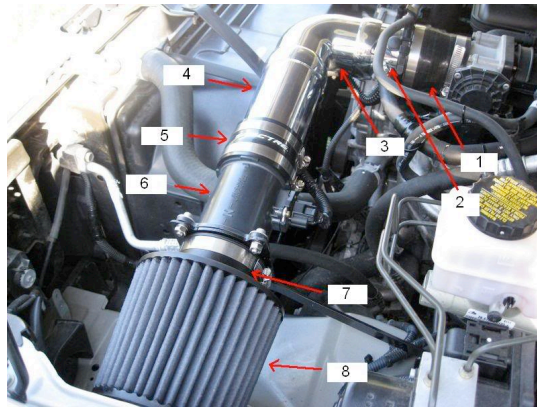


1. 3" ID to 2.75" ID hose adapter connected to throttle body with two hose clamps.



2. Spectre 8707 Chrome Vacuum/Sensor Adapter connected to coupler



3. About 8" of 3/4" OD (~1/2" ID) tubing to go from adapter and fitted into original vent tube. Also a small 1" hose clamp.

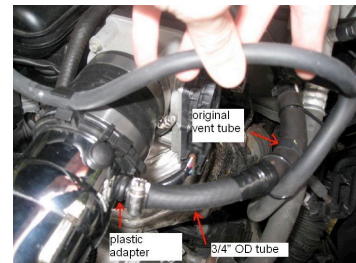

4. Spectre 90 Degree 3" elbow connected to vacuum adapter



5. Spectre 6" long straight tube with 3" diameter connected to 90 degree elbow



6. Spectre 3" ID Rubber coupler and 2 3" hose clamps connected to straight tube and MAF tube



7. Nissan MAF tube part # 22680-CA000 with MAF sensor wires extended one at a time and plugged in. Also need 2 1" & 2 1/2" bolts



8. Spectre intake duct mounting plate connected to MAF tube with slight modification of holes.



9. AEM 21-203DK 3" Inlet x 5" Element Dryflow Air Filter connected to mounting plate with hose clamp



ADDITIONAL THINGS

1. Some type of heat shield
2. 2 brackets/ 2 grommets to hold intake and bolts
3. 18 gage wire to extend sensor wires 12"
4. Heat shrink and some type of wire protector

